




# **Instructions for Removing Rainman Electric PSU Case**

v1.2

**Step 1:** Dismantle filter housing, remove from filter housing bracket and remove filter housing bracket from case. Also remove switch by unscrewing 2 mounting screws and disconnecting 2 wires.



**Step 2:** Turn the machine onto its front side, ie: the side with the Rainman logo. Use towel to prevent scratching of plastic case. Remove the 6 screws securing the case to the metal frame (4mm allen key required). Note: ensure the travel plug is in the high pressure pump to prevent oil from dripping out while unit is on its side.

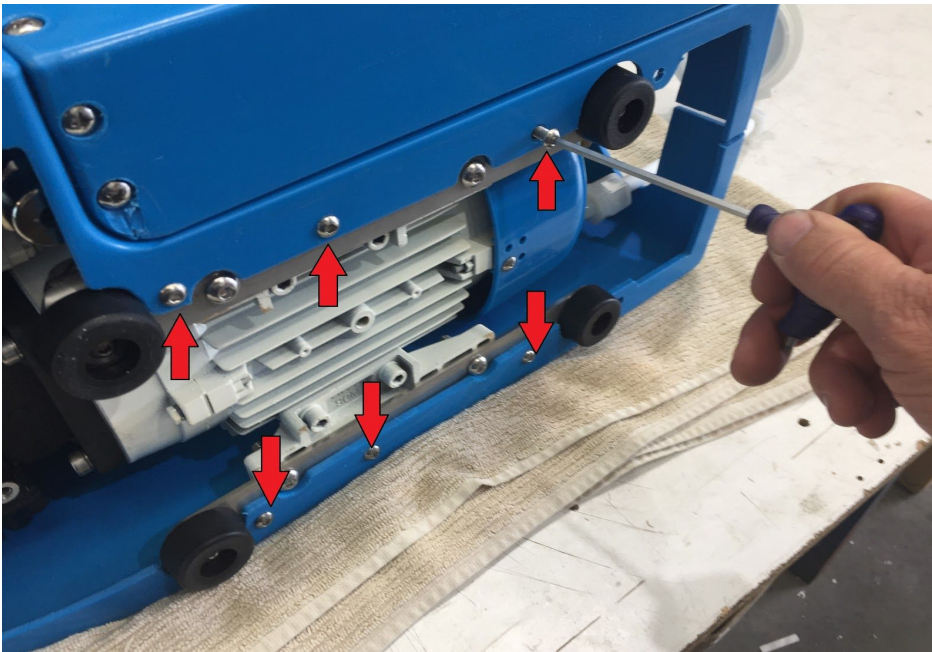

**Step 3:** Undo right hand white hose from lift pump as shown.



**Step4:** Placing the machine on the edge of a bench, pull rear of case apart and lift from the internal assembly. Note, this step is easiest when the case is as warm as possible. If possible place machine in direct sunlight or other warm place for 15 mins before this step.



